 

4. Detaching the hinge cover.

If detaching the hinge cover is needed, refer to the steps as follows:

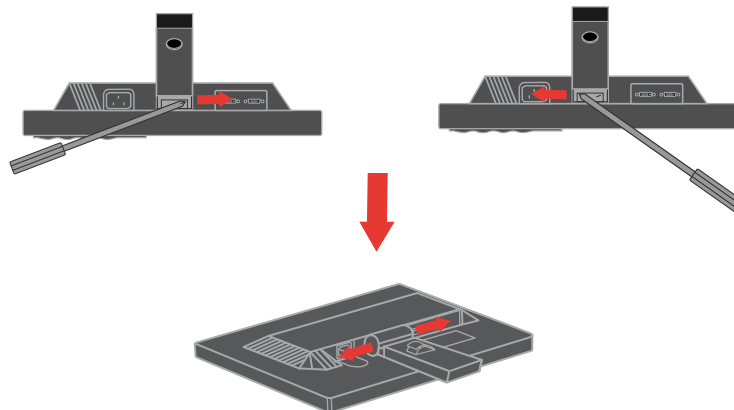
①



②



③



④

